ROLLANT		350 RC	350 RF	340 RC	340 RF	340 R
Hitching						
PTO shaft speed	rpm	540	540	540	540	540
Power requirement	kW/hp	64/87	64/87	55/75	55/75	55/75
Cam-type overload clutch		•	•	0	0	0
Mechanical jack		•	•	•	•	•
Hydraulic connection						
One-way spool valve for pick-up lift		•	•	•	•	•
Dual-acting spool valve for tailgate cylinders		•	•	•	•	•
Pick-up						
Width	m	2.10	2.10	2.10	2.10	1.85
DIN raking width	m	1.90	1.90	1.90	1.90	1.65
Number of tine bars		4	4	4	4	4
Ground tracking via two rigid pick-up guide wheels		-	-	•	•	•
Ground tracking via two oscillating pick-up castor guide wheels		•	•	0	0	0
Crop guard		•	•	0	0	0
Crop feed						
Rotor		ROTO CUT	ROTO FEED	ROTO CUT	ROTO FEED	Feed rake
Number of knives		14	-	14	_	-
ROTO REVERSE		0	0	0	0	_
Bale chamber						
MAXIMUM PRESSURE SYSTEM II (MPS II)		•	•	-	-	-
Automatic chain lubrication		•	•	•	•	•
Bale chamber dimensions						
Width	m	1.20	1.20	1.20	1.20	1.20
Diameter	m	1.25	1.25	1.25	1.25	1.25
Operation						
CLAAS STANDARD TERMINAL (CST)		•	•	•	•	•
OPERATOR		0	0	0	0	0
Wrapping and tying						
Net wrap and/or twine tying		•	•	•	•	•
Number of twine reels in the twine box		6	6	6	6	6
Bale drop onto field Bale ejector		•	•	•	•	•
			•	•	•	•
Tyres						
11.5/80 R 15.3 8 PR		•	•	•	•	•
15.0/55 R 17 10 PR		0	0	0	0	0
19.0/45 R 17 10 PR		0	0	0	0	0
Dimensions and weights						
Length	m	4.70	4.70	4.70	4.70	4.70
Width	m	2.50	2.50	2.50	2.50	2.50
Height	m	2.30	2.30	2.30	2.30	2.30
Weight	kg	2990	2990	2810	2685	2685



11.5/80 R 15.3 8 PR



15.0/55 R 17 10 PR



19.0/45 R 17 10 PR

CLAAS continually develops its products to meet customer requirements. This means that all products are subject to change without notice. All descriptions and specifications in this brochure should be considered approximate, and may include optional equipment that is not part of the standard specifications. This brochure is designed for worldwide use. Please refer to your nearest CLAAS dealer and their price list for local specification details. Some protective panels may have been removed for photographic purposes in order to present the function clearly. To avoid any risk of danger, never remove these protective panels yourself. In this respect, please refer to the relevant instructions in the operator's manual.